

Aguilar Amplification LLC 599 Broadway, 7<sup>th</sup> fl. NY, NY 10012 www.aguilaramp.com



#### **DB 925**

The DB 925 delivers powerful broadband boost in a lightweight, space-saving micro housing. It's musically sculpted two band eq enhances any bass you run through it, adding body and weight to your low-end while opening your high-end. With its compact design and responsive controls, the DB 925 is a perfect gigging solution for musicians on the go.

## Features:

- Discrete all-FET design
- Musically sculpted EQ w/ two bands of boost
- Compact design and heavy-duty steel construction
- 9-volt power supply required

# Owner's Manual Manual Version 1.0

#### I. Functions

**B** (BASS): Broadband bass boost control with a max of 18 dB at 40 Hz.

T (TREBLE): Broadband treble boost control with a max of 18 dB at 4 kHz.

**ENGAGE:** Toggles between on and off. The blue LED indicates that the effect is on.

denotes 1/4" input and output jacks. The input jack is located on the right-hand side panel and labeled with an arrow pointing towards the pedal. The output jack is located on the left-hand side panel and it's labeled with an arrow pointing away from the pedal.

**DC:** This is a standard 2.1mm DC jack. The center terminal polarity is negative.

# **II. Specifications:**

Current consumption:	2.5mA
Input impedance:	1MΩ (Effect On)
Output impedance:	600 Ω
External DC Power:	9-10VDC, center terminal negative
Dimensions:	3.65" x 1.5" x 1.25"

### **III. Warranty Information**

The DB 925 is covered under limited warranty against defects in materials and workmanship for a period of 3 years. This warranty is non-transferable. The warranty period starts from the date of purchase from an authorized Aguilar dealer. Please retain your sales receipt as it is necessary to obtain warranty service. Before sending your unit to Aguilar for repair, you must receive a return authorization number from us. Please contact us via email (techsupport@aguilaramp.com). Do not send any products to us without first receiving a return authorization from Aguilar.

You are responsible for all shipping charges. You must ship the unit to us freight prepaid. We will return the unit to you freight collect. Aguilar Amplification LLC is not responsible for shipping damage, either to or from our service center. Claims must be filed with the carrier. The only company in the USA authorized to perform work under this warranty is Aguilar Amplification LLC of New York, NY.

Warranty service outside the USA: Warranty Service may be different in your country. Please contact the Aguilar distributor in your country for terms and procedures.

#### IV. Environmental Protection



This symbol means that used electrical and electronic equipment (WEEE) should not be disposed of with household waste. Please contact your local authority or retailer for further information on nearest WEEE collection center and recycling advice.